


Balance Bike Parts List


	Part Description	Part Number
1	BBI Wheel	BBI101
2	BBI Handlebars	BBI102
3	BBI Forks	BBI103
4	BBI Frame	BBI104
5	BBI Seat	BBI105
6	BBI Handlebar Grips	BBI106
7	BBI Axles	BBI107

	Part Description	Part Number
8	BBI Clamp	BBI108
9	BBI Bearing Bushings	BBI109
10	BBI Large Flat Washers	BBI110
11	BBI Small Flat Washers	BBI111
12	BBI Bearings	BBI112
13	BBI Tools	BBI113

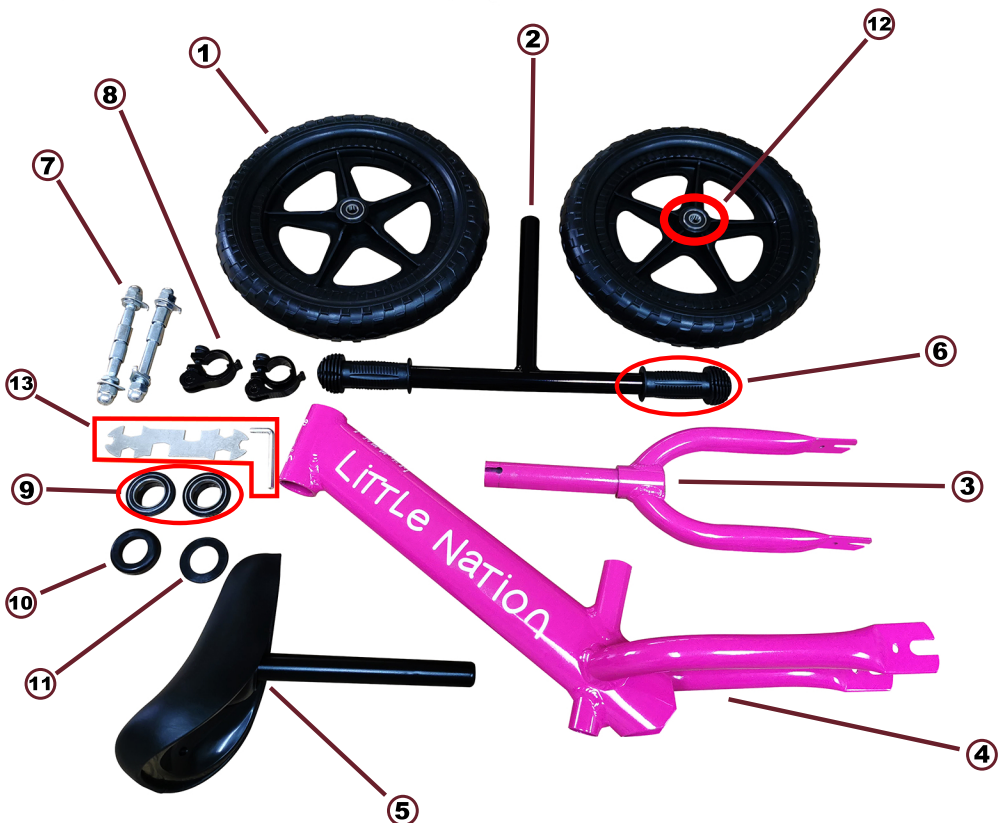

Balance Bike Assembly Manual

Assemble the front fork & handle bars

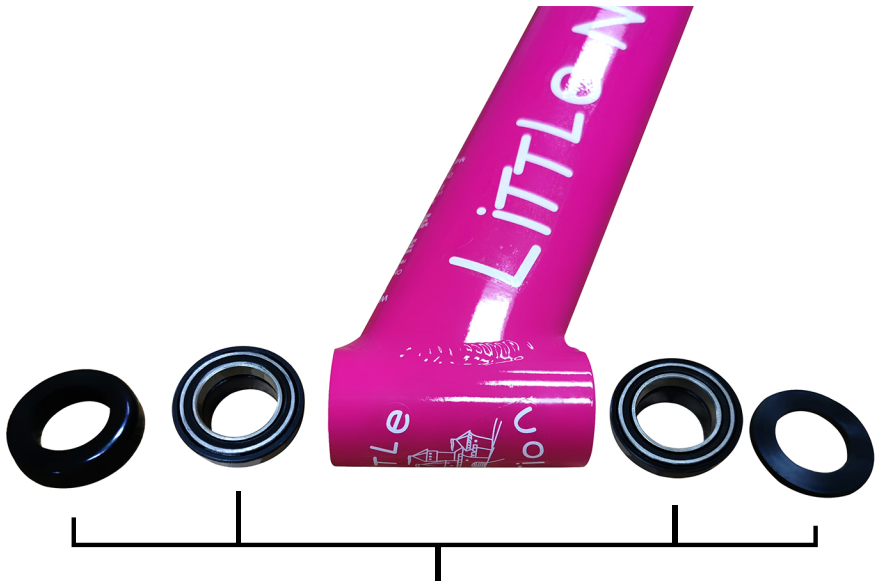

The headset consists of 4 parts. A large washer. 2 bearing bushings and a small washer. The small washer goes on the bottom of the head set and at the bas of the forks. The larger washer connects at the top of the headset.




Push the 2 bearing bushings into the frame tube



**Place the large
washer on top of
the top bushing
bearing**

**Put the small washer
over the fork top and
push the fork through
the frame**

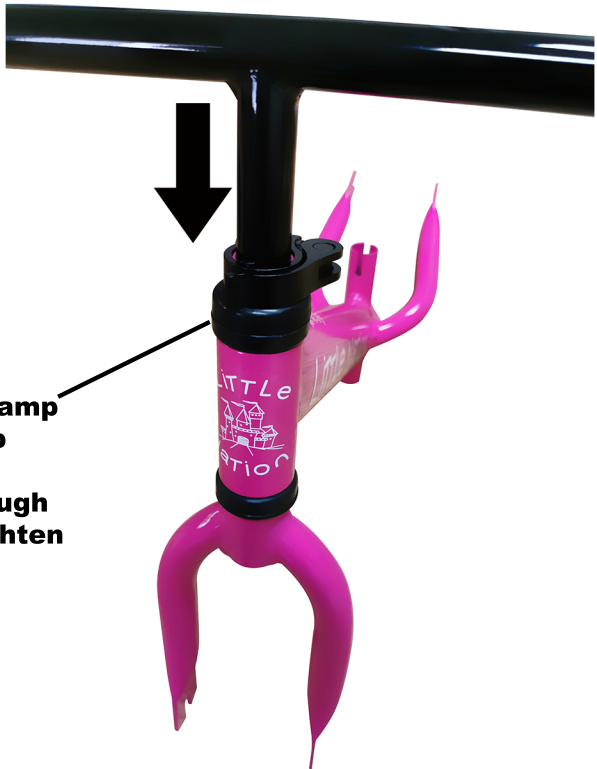

**Place a black clamp
over the fork top
and put the
handlebars through
the fork top. Tighten
the clamp**

Assemble the seat.



**Put the second black clamp
on the frame seat pole.
Keep the clamp at the top
of the pole.**

Push the seat post through the frame and tighten the clamp



Assemble the wheels



Turn the bike upside down

Take a wheel and an axle





Remove the end nuts, hooked washer and long washer and push the axle through the wheel. If the axle is unable to go through the wheel. There is a washer inside the middle of the 2 wheel bearings that can be moved around by tapping the wheel.

Replace the long washer and inside nut and fit through the frame.



Replace the hooked washer and put into the frame hole. replace the end nut and tighten.





**Please now go through and check all
nuts, bolts and clamps have been
correctly tightened**

