

STEP 7 Assembly


Assemble as illustrated below.

Using big knob(12 pcs) and small knob(8 pcs) to cover the bolts of joints.

Using the allen key to turn the screws in order to tighten the knobs

8 pcs small knobs for installation on the bottom(grounding surface)

12 pcs big knobs for installation on the climbing frame

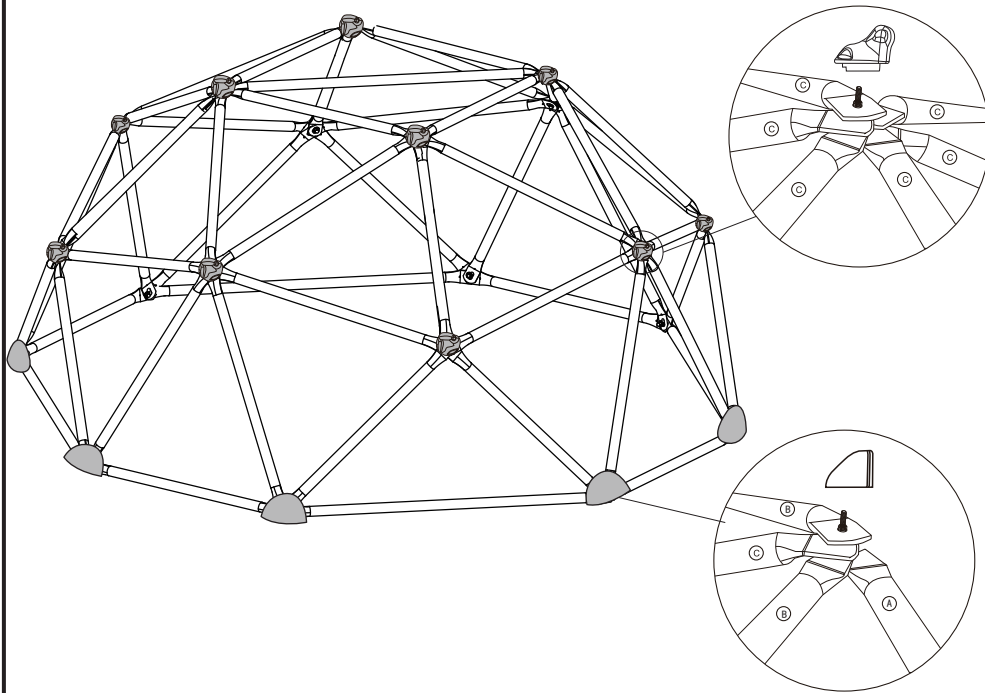

Attention: Make sure that the notch of Knob fits over the top of the tube joint.

STEP 8 Assembly

Fully Assembled

