


## STEP 5 Assembly

Assemble as illustrated below.


Four short tubes B are used to connect the top of the pentagons formed at Step 4. Use the Flat Nut to lock it firstly, but please don't tighten it too much.

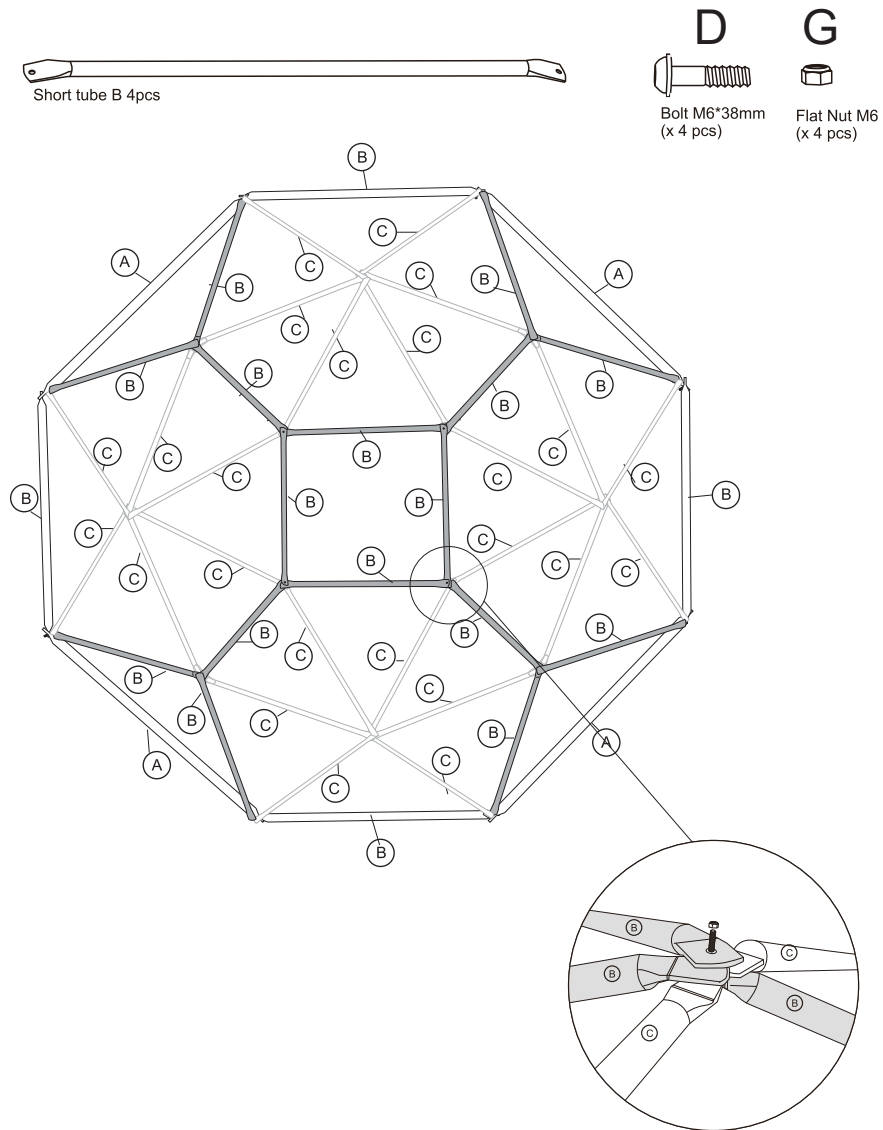

## STEP 6 Assembly

Assemble as illustrated below.

Assemble the rest long tube A on the cross of top square. Before that, please loose the flat nut locked at Step 5 firstly, so that the Long tube A can be jointed with other tubes.

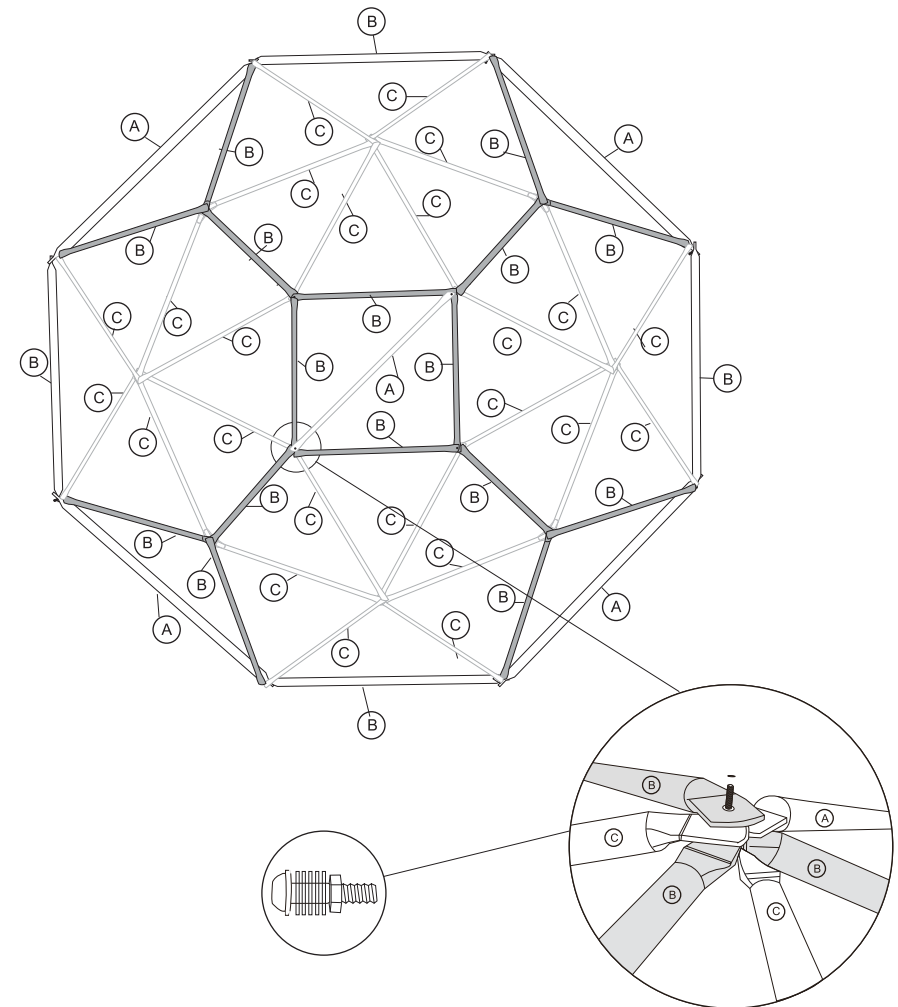

**HINT: Please fully tighten all the bolts and nuts until snug.**