


### STEP 3 Assembly

Assemble as illustrated below.

Assemble four hexagons formed at step 2 on the round base (Step 1).  
Two tubeC at the same hexagon are joined with tubeB without nut.

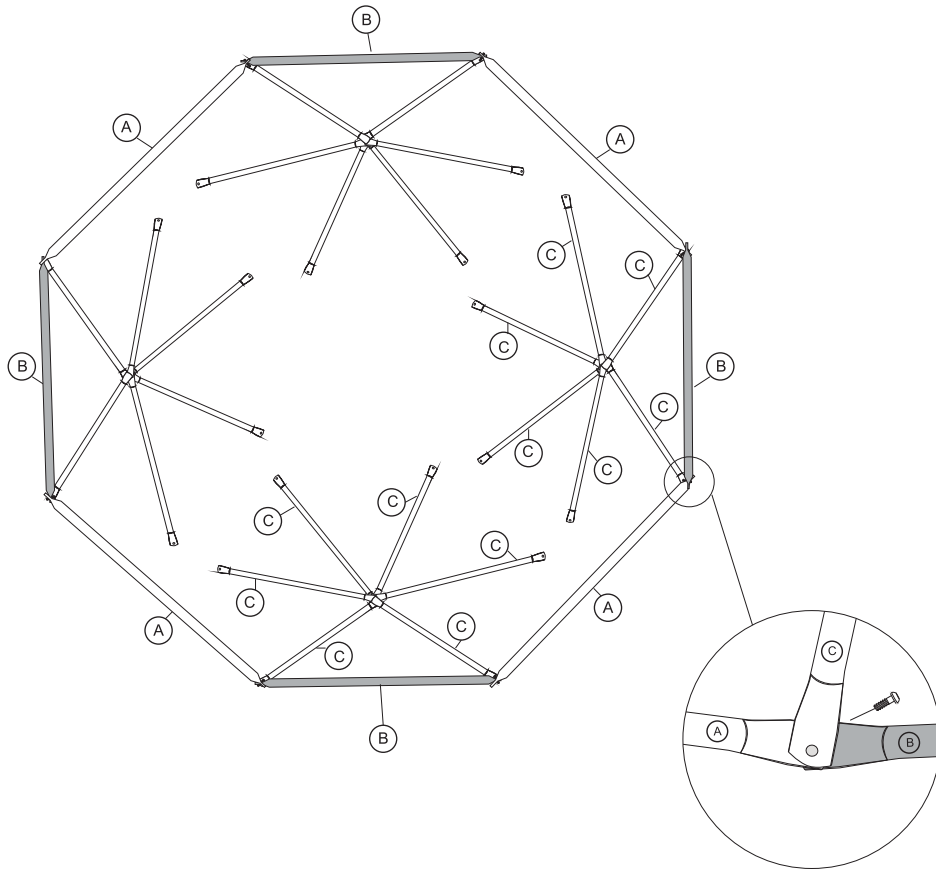

### STEP 4 Assembly

Assemble as illustrated below.

Joint the hexagons together by adding three pcs Short tubes B as illustrated below. Two Short tubeB are connected with the round base, and Rubber head Nut is used for locking.

Now the base of the dome is completed.

